


Operating Manual For Easy Clicker

UR3L-SR4

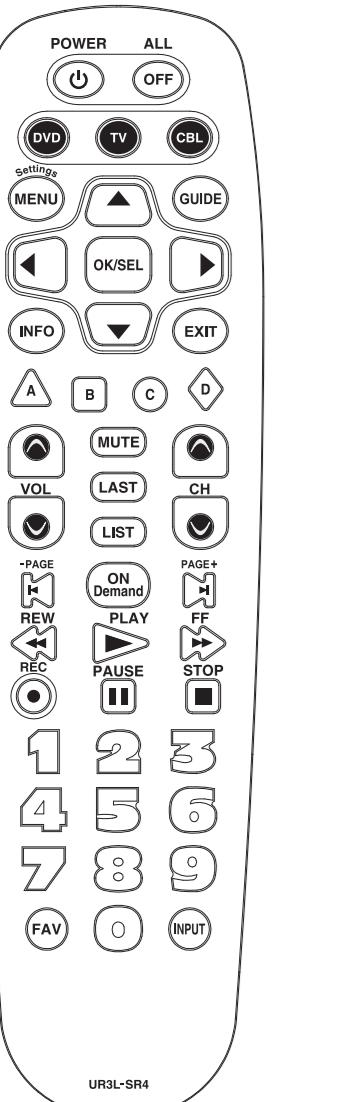

1 Introduction

This remote control is designed to operate most Digital and Analog Cable Boxes, as well as TVs, and a VCR or DVD player.

2 Replacing Batteries


Before you program or operate the remote control, you must install two new AAA alkaline batteries.

STEP1 Remove the battery compartment cover from the back of your remote control.

STEP2 Check battery polarity carefully, and install the batteries as shown in the illustration below.

STEP3 Replace the battery compartment cover.

Install two
AAA alkaline batteries
as shown here

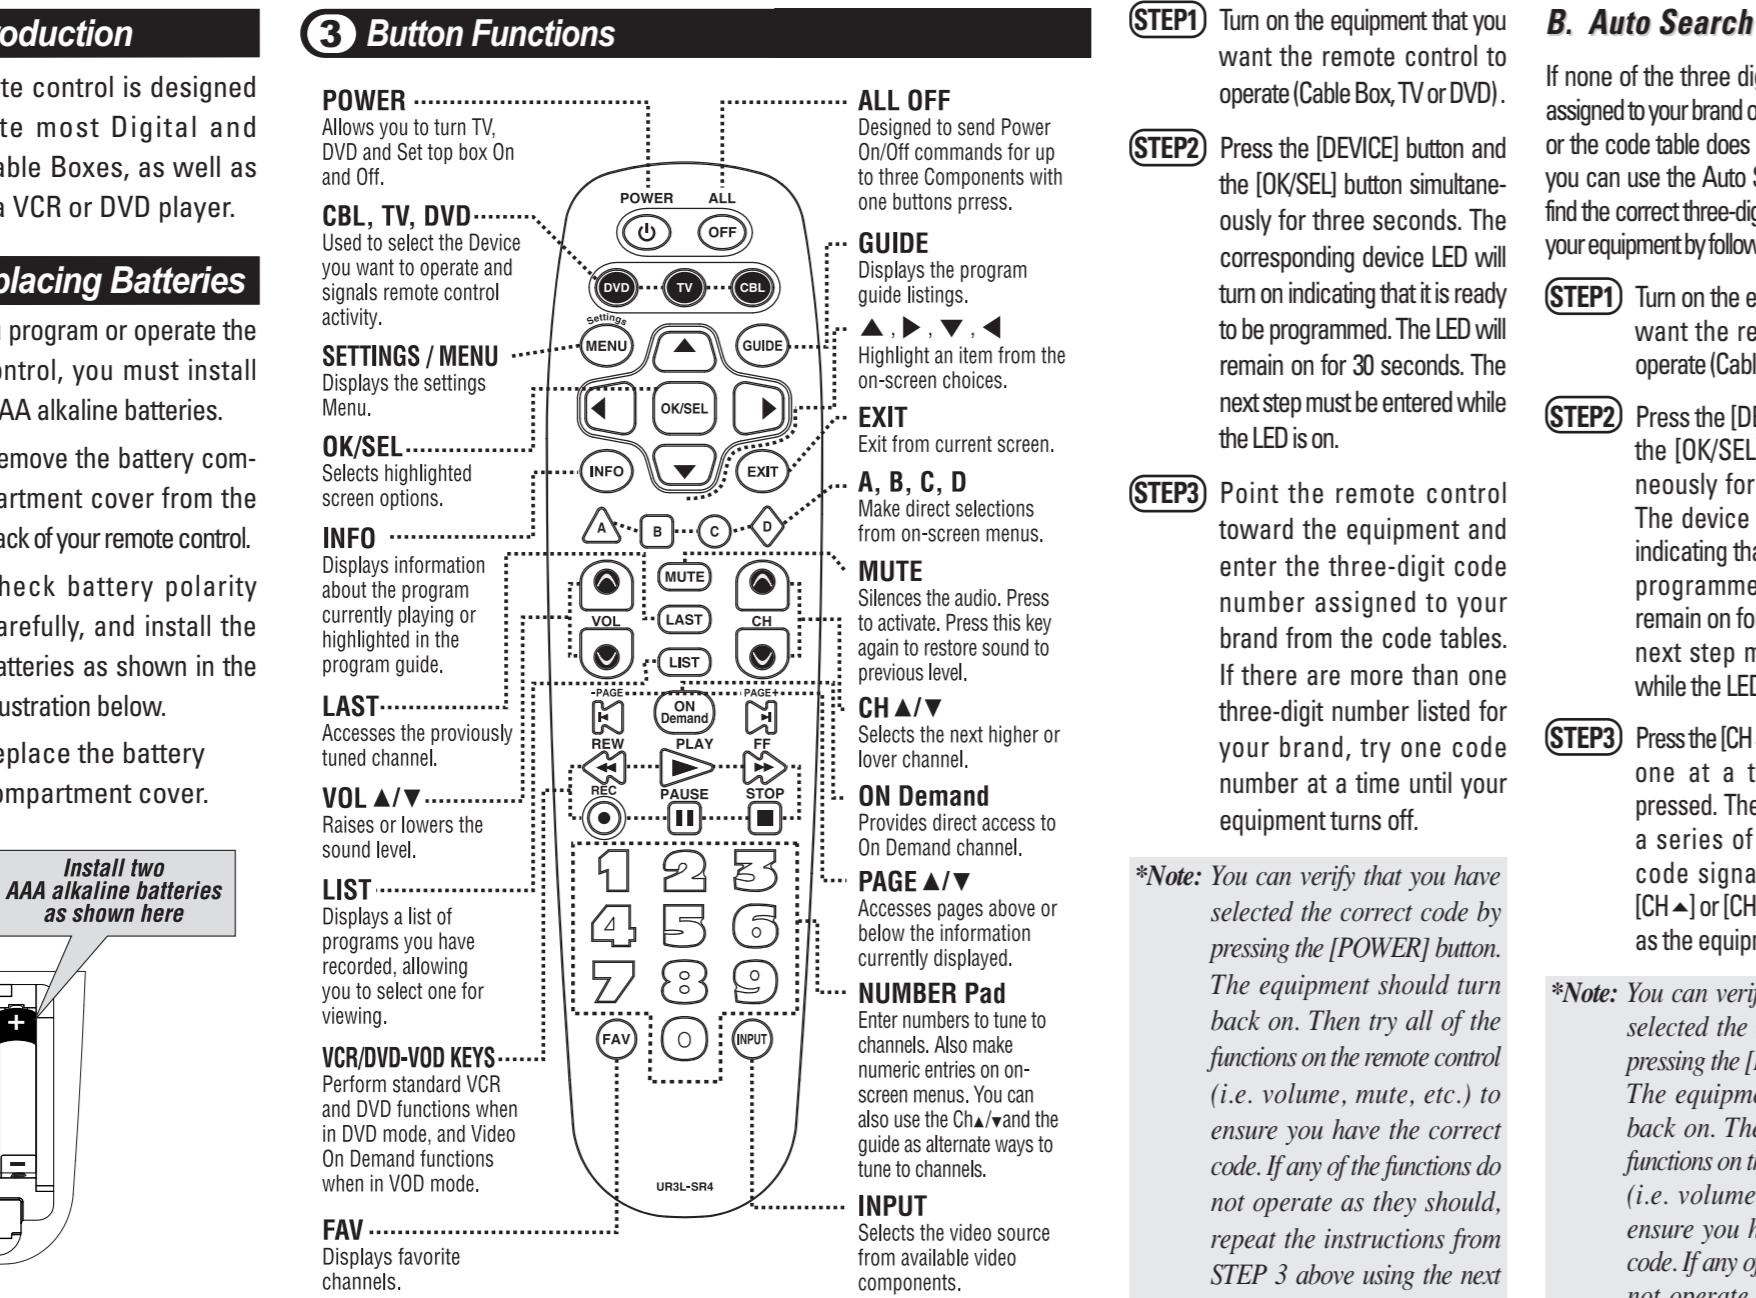


4 Programming the Remote Control

*Note : In this section, when you are instructed to press a [DEVICE] button, that means you should press either the CBL, TV, or DVD button, depending on which device you are programming the remote to operate.

A. Manual Programming

The remote control can be programmed by entering a three-digit code number that corresponds to particular brands and models of equipment. The three-digit code numbers are listed in the code tables sections of this instruction manual.

3 Button Functions

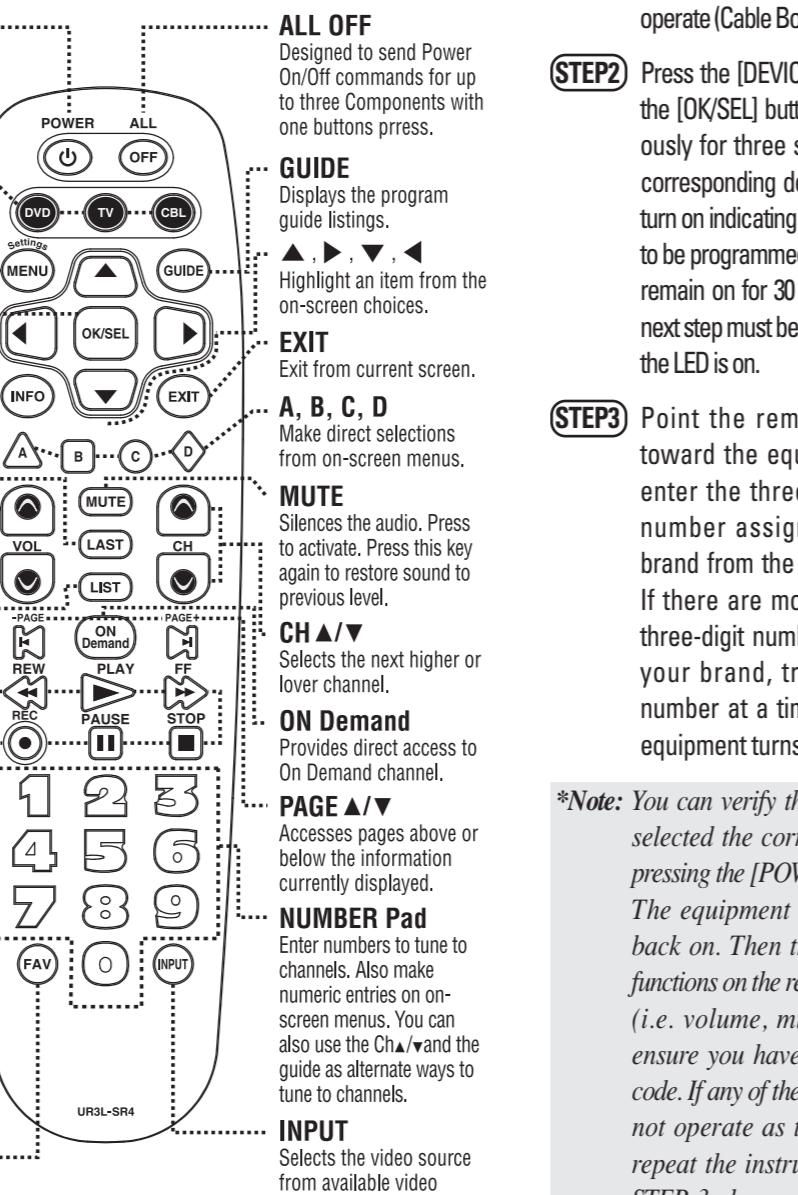

STEP1 Turn on the equipment that you want the remote control to operate (Cable Box, TV or DVD).

STEP2 Press the [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The corresponding device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be performed while the LED is on.

STEP1 Turn on the equipment that you want the remote control to operate (Cable Box, TV or DVD).

STEP2 Line up the UR3L-SR4 to the other remote, head-to-head, 1 or 2 inches apart.

STEP3 Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.

STEP4 Press the [INFO] button. The device LED will blink a number of times indicating the number of each digit for the code. Each digit is separated by a one second interval of the LED being off.

Example : One blink, then three blinks, then eight blinks indicates the code number 138.

*Note : Ten blinks indicates the number 0.

D. Programming a Second TV to the DVD Button

*Note: You can verify that you have selected the correct code by pressing the [POWER] button.

The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above using the next three digit code number from the brand list.

*Note: You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above using the next three digit code number from the brand list.

F. Erasing a Single Learned Command

STEP4 Store the three-digit code by pressing the same [DEVICE] button to store the code. The device LED will blink twice to confirm that the code has been stored.

STEP4 Press the first [Device] button you want to store in the [ALL OFF] button and then the [POWER] button. Repeat this for other Device until you have stored all the desired power commands into the [ALL OFF] button.

B. Auto Search Method

If none of the three digit code numbers assigned to your brand of equipment works, or the code table does not list your brand, you can use the Auto Search Method to find the correct three-digit code number for your equipment by following steps:

STEP1 Press the appropriate [DEVICE] button and the [OK/SEL] button simultaneously for three seconds. The corresponding device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be performed while the LED is on.

STEP2 To exit, press and hold both the [Device] and [INPUT] buttons simultaneously until the Device LED blinks 3 times.

STEP3 Turn on the equipment that you want the remote control to operate (Cable Box, TV or DVD).

STEP4 Press the [CH ▲] button to save the power commands you stored. The [CBL] button will blink twice to confirm the Device have been saved.

E. The Learning Method

STEP1 Press and hold the button you want to erase for 3 seconds. The Device LED will blink twice to confirm the erasure.

STEP2 Press the [Macro] button once. This will bring up the first channel. Press once again and it will bring up the second channel. Press again and it will bring up the third channel.

STEP3 To erase the Macro programming and return to the original function:

STEP1 Press the [CBL] button to select the CABLE mode.

STEP2 Press a [Macro] button and the [OK/SEL] button simultaneously for 3 seconds. The CBL device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP3 Press the [CH ▲] button to erase the functions stored in the button. The CBL device LED will blink twice to confirm that the memory button has been erased.

STEP4 Press the [TV] button. The device LED will blink twice to confirm the programming.

J. Programming Volume Control

STEP1 Press the [CBL] button to select the CBL mode.

STEP2 Press the [INFO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

STEP3 Once you have completed teaching UR3L-SR4 all desired commands for that Device, save the learned commands by pressing the [Device] and [INPUT] buttons simultaneously until the Device LED blinks 3 times. Now test all the buttons to make sure they learned correctly.

STEP4 Once you have completed teaching UR3L-SR4 all desired commands for that Device, save the learned commands by pressing the [Device] and [INPUT] buttons simultaneously until the Device LED blinks 3 times. Now test all the buttons to make sure they learned correctly.

STEP4 Once you have completed teaching UR3L-SR4 all desired commands for that Device, save the learned commands by pressing the [Device] and [INPUT] buttons simultaneously until the Device LED blinks 3 times. Now test all the buttons to make sure they learned correctly.

C. To find the Three-Digit Code that Was Programmed using the Auto Search Method

STEP1 Press the [Device] button (CBL, TV or DVD) to be programmed and the [INPUT] buttons simultaneously for 3 seconds until the Device LED light turns on.

STEP2 To exit, press and hold both the [Device] and [INPUT] buttons simultaneously until the Device LED blinks 3 times.

STEP3 Turn on the equipment that you want the remote control to operate (Cable Box, TV or DVD).

STEP4 Press the [CH ▲] button to save the power commands you stored. The [CBL] button will blink twice to confirm the Device have been saved.

E. The Learning Method

STEP1 Press and hold the button you want to erase for 3 seconds. The Device LED will blink twice to confirm the erasure.

STEP2 Press the [Macro] button once. This will bring up the first channel. Press once again and it will bring up the second channel. Press again and it will bring up the third channel.

STEP3 To erase the Macro programming and return to the original function:

STEP1 Press the [CBL] button to select the CABLE mode.

STEP2 Press a [Macro] button and the [OK/SEL] button simultaneously for 3 seconds. The CBL device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP3 Press the [CH ▲] button to erase the functions stored in the button. The CBL device LED will blink twice to confirm that the memory button has been erased.

STEP4 Press the [TV] button. The device LED will blink twice to confirm the programming.

L. Low Battery Warning

STEP1 When the battery is low (2.3V-2.0V) and needs to be replaced with fresh batteries, device LED will blink 2 times in sequence whenever a [DEVICE] button is pressed to turn on equipment.

STEP2 Press the [CBL] button to select the CBL mode.

STEP3 Press the [INFO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP4 Press the [INFO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds. The next step must be performed while the LED is on.

M. Memory Lock System.

STEP1 This remote control is designed to retain programmed memory for 10 years — even after batteries are removed from the remote control.

STEP2 For additional information about your remote control, go to www.universalremote.com.

Note : To return CBL device to TV volume repeat steps above replacing [CBL] with [TV] in Step 3.

K. Programming Channel Control

Channel controls are factory-programmed to automatically transfer to the respective Device mode you select, as follows:

CBL: CBL **TV**: CBL **DVD**: DVD

If you wish to store the TV channel controls in TV mode, use the following steps.

STEP1 Press the [OK/SEL] button and [TV] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP2 Press the [CH ▲] button. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP3 Press the [INFO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP4 Press the [INFO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds. The next step must be performed while the LED is on.

N. Programming a Second Cable Box

STEP1 When the battery is low (2.3V-2.0V) and needs to be replaced with fresh batteries, device LED will blink 2 times in sequence whenever a [DEVICE] button is pressed to turn on equipment.

STEP2 Press the [CBL] button to select the CBL mode.

STEP3 Press the [INFO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP4 Press the [INFO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds. The next step must be performed while the LED is on.

